




Town of Simsbury

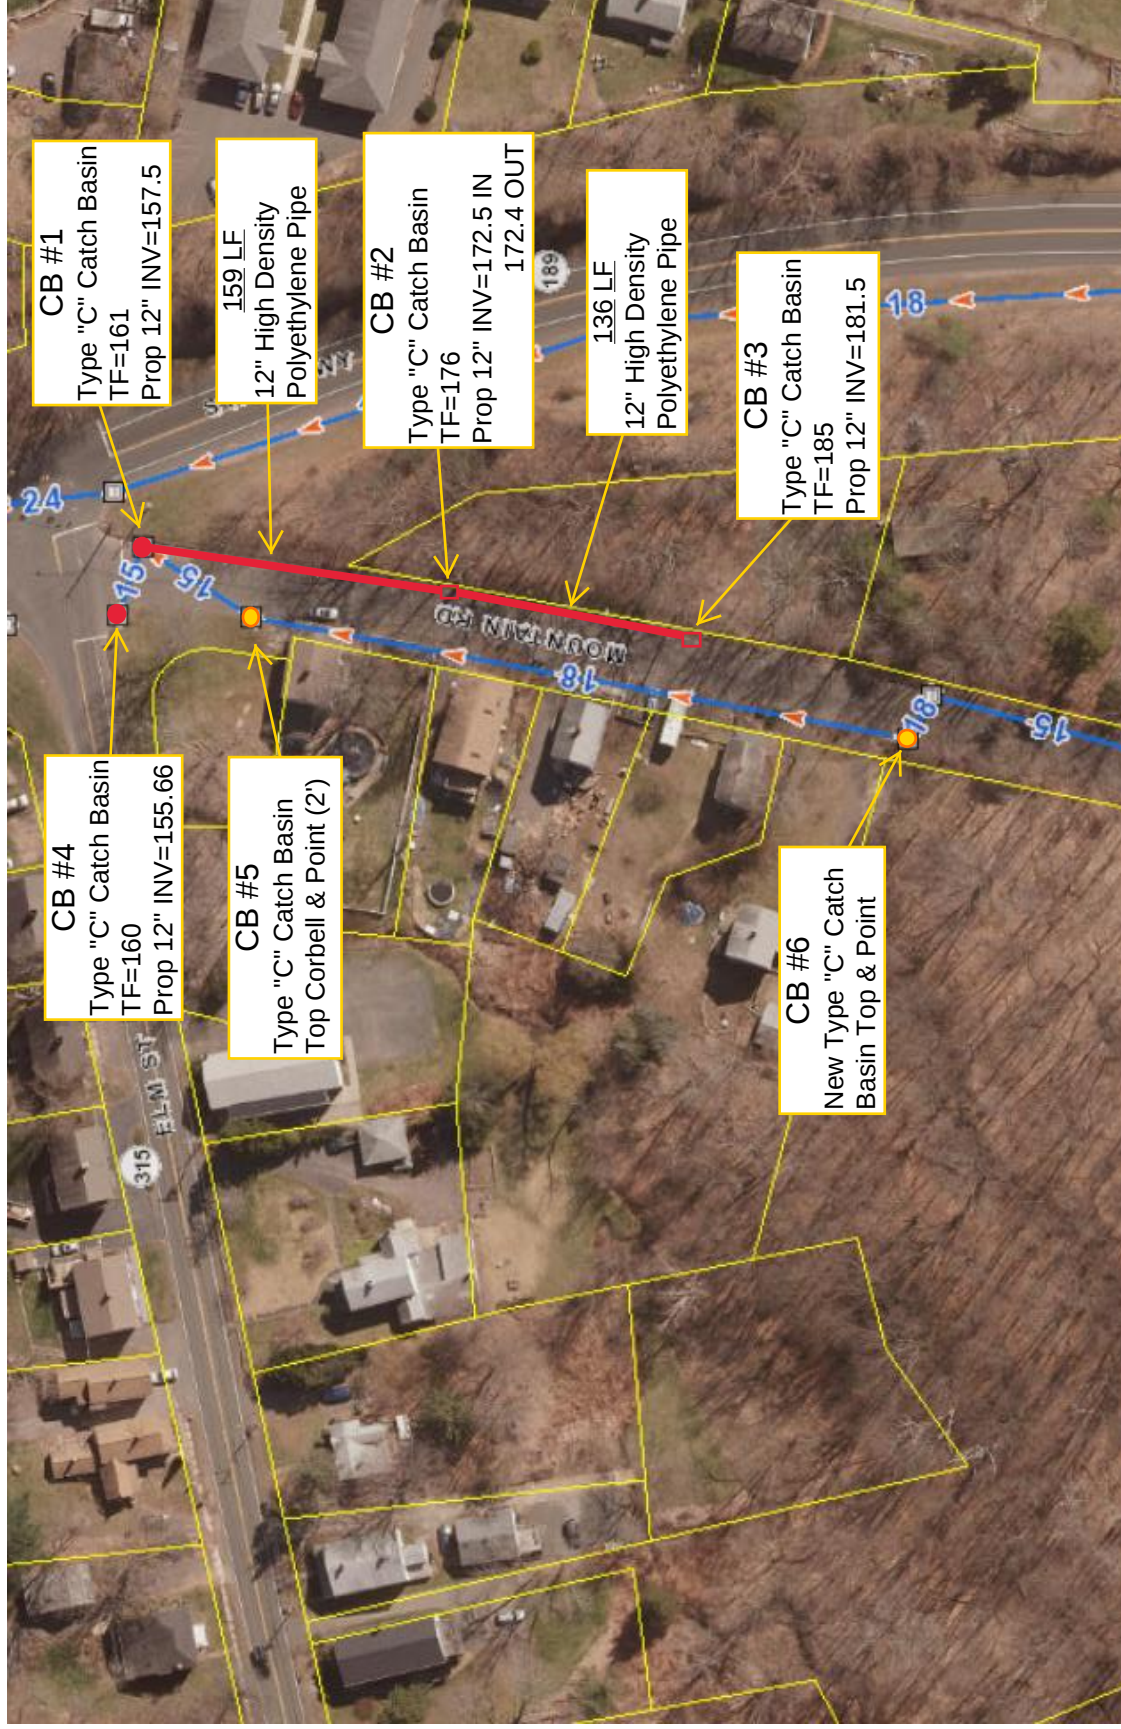

Mountain Road Catch Basin
and Drainage Repairs

Notes:

- CB #1 - Remove & Dispose to 3'6" tie in new 12" HDPE. Rebuild set new Type "C" top to grade.
- CB #2 - Install new Type "C" Catch Basin
- CB #3 - Install new Type "C" Catch Basin
- CB #4 - Rebuild existing Type "C" Catch Basin, set to grade + 1 1/2"
- CB #5 - Install new Top, Corbell and Point existing Type "C" Catch Basin
- CB #6 - Install new Top & Point on existing Type "C" Catch Basin

● = CATCH BASIN REPAIR

● = CATCH BASIN TOP & POINT

□ = NEW CATCH BASIN



Town of Simsbury



Mountain Road Catch Basin
and Drainage Repairs

Notes:

- CB #6 - Install new Top & Point on existing Type "C" Catch Basin
- CB #7 - Install new Top & Point on existing Type "C" Catch Basin
- CB #8 - Install new Top & Point on existing Type "C" Catch Basin
- CB #9 - Install new Top & Point on existing Type "C" Catch Basin
- CB #10 - Install new Top & Point on existing Type "C" Catch Basin

● = CATCH BASIN REPAIR

● = CATCH BASIN TOP & POINT

□ = NEW CATCH BASIN